


Please read the instruction carefully and keep it properly for all users to refer to at any time.




Tips

For the sake of your health, wear blue-blocking glasses, and do not look at the blue light during use.

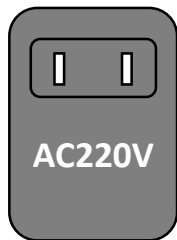

AC220V

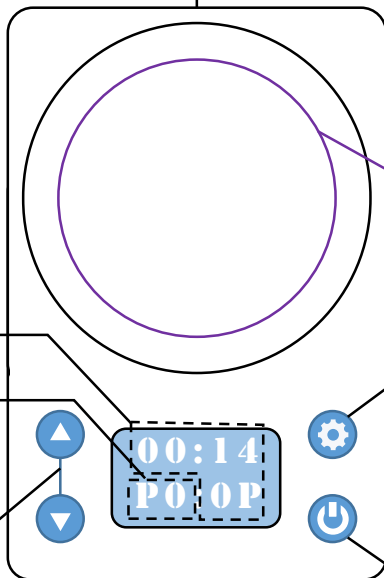

Suitable curing range

Display screen

Time region

Pattern region

Adjust

Time+

Time-

Long press: Setting

Set

Short press: Switching

Start/Stop

Power

Time setting method

1. Long press the " Setting " button until the " Pattern region" flickering
2. Short press the "Adjust" button until the content of " Pattern region" is "P0" (if it is already "P0", no adjustment is required)
3. Short press the "Setting" button until the "Time region " flickering
4. Short press the "Adjust" button to the estimated time
5. Long press the "Setting" button until the display screen stop flickering to save the settings

Equipment lighting operation

1. Press the "Power" button to start lighting
2. Press the "Power" button to stop lighting
3. Press the "Power" button to continue lighting

Time reset operation

1. Long press the "Setting" button and the screen flickering
2. Long press the "Setting" button and the screen stop flickering

Sc

Reserve

For more product-related technical details and answers, please refer to the official account or leave a message in the official account



Please read the instruction carefully and keep it properly for all users to refer to at any time.

Introduction

P0、P1、P2: Click the power button to start work, and click the power button again to stop work during work.

P3: The light is on when the power is powered on, and the light is off when the power button is pressed. And the countdown starts, and when the time is over, the lights go on. When the light source is working, press the power button, the light is not bright and the countdown is suspended.

P4: After pressing the power button, cycle on and off the light source with the set duration. Setting duration method: Enter the setting mode and then enter the setting duration option. The word OP is to set the open duration; short press the setting button to switch CL is to set the close duration; LOP is to set the number of cycles; after the setting is completed, long press the setting button to save and exit the setting mode.

P5: The mode is the same as P4, except that it is close and then open.

P6: When powered on, it starts working in the same way as P4.

P7: When powered on, it starts working in the same way as P5.

P8: Click the power button to light up, and click the power button again to reset the working time during the working period.

P9: When the power is on continuously, click the power button to turn off the lamp. When the lamp is off, click the power button again to reset the time. When the time is over, the light will turn on.

Q&A

1. How to adjust the light length?

Press and hold the setting button. The screen flashes and "SET" appears to enter the setting interface. When the mode setting appears, press the setting button again and the time seconds will blink. You can adjust the time by pressing the up or down button. After the setting is complete, press and hold the setting button to save and exit the setting mode.

2. How to deal with the light source time after setting the decimal point, the time is wrong?

When setting the time, the power button is delayed, so that the time appears decimal. The solution is to enter the setting mode again and set the duration. When the time starts to blink, you can click the power button until no decimal point appears on the screen. After the setting is complete, press and hold the setting button to save and exit the setting mode.